


Open End Bench 2 sizes

Leclerc Looms

Since 1876






 6384-2000	23" x 38" (58cm x 96 cm)
6384-4000	26" x 44" (66cm x 120 cm)

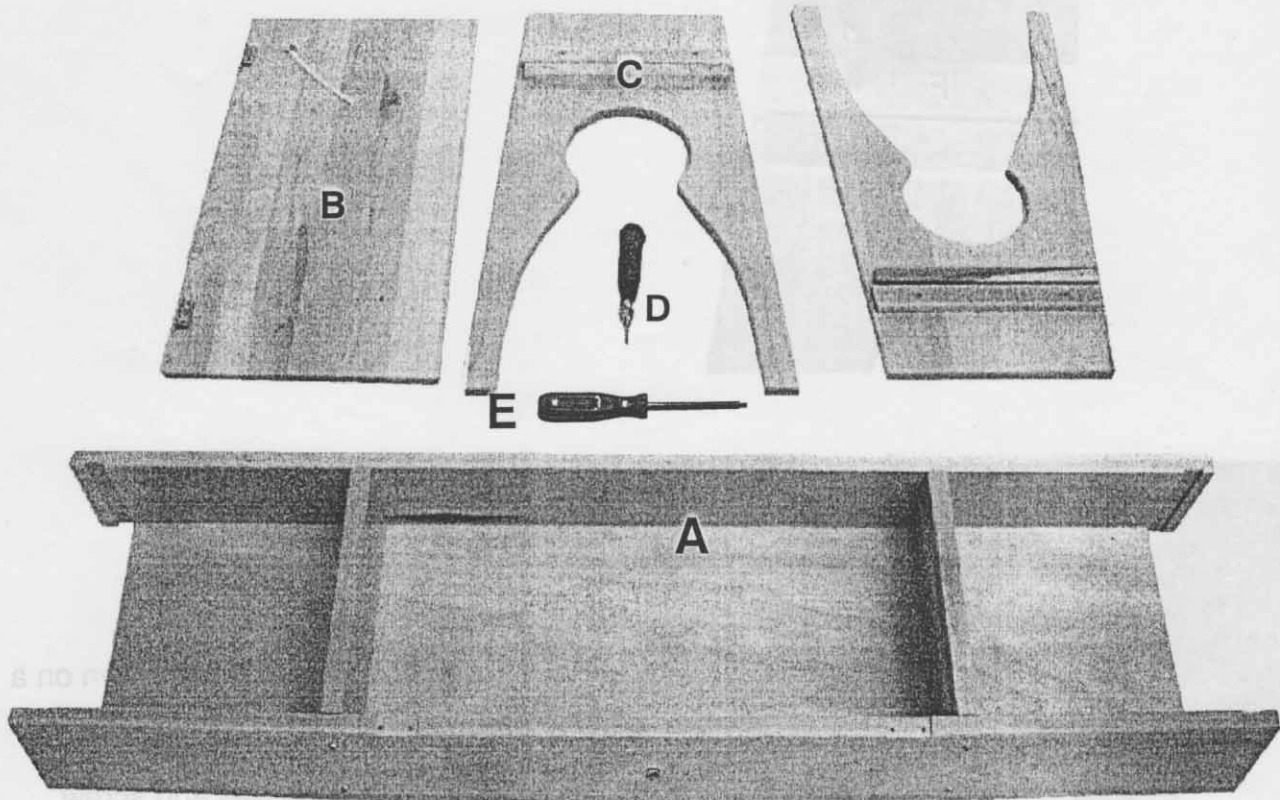

PARTS AS SHIPPED:

   
- A- 1 Bench frame
- B- 1 Bench cover with hinges
- C- 2 Bench legs
- D- 1 Multi bits screwdriver
- E- 1 Green screwdriver

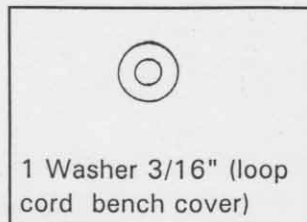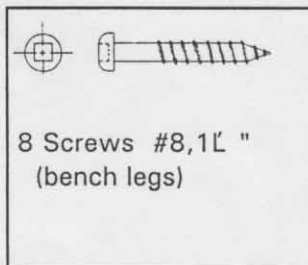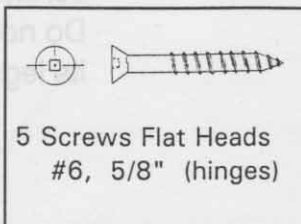


1573 Savoie
C. P. 4
Plessisville, Qc.
G6L 2Y6

TEL: 819-362-7207
FAX: 819-362-2045
www.leclerclooms.com
leclerc@leclerclooms.com

 To reduce shipping fees and avoid breakage, benches are shipped un-assembled. All benches that we ship are assembled here in our shop to make sure they are straight and do not rock. Assembling a bench is not easy so please take the time to follow the instruction

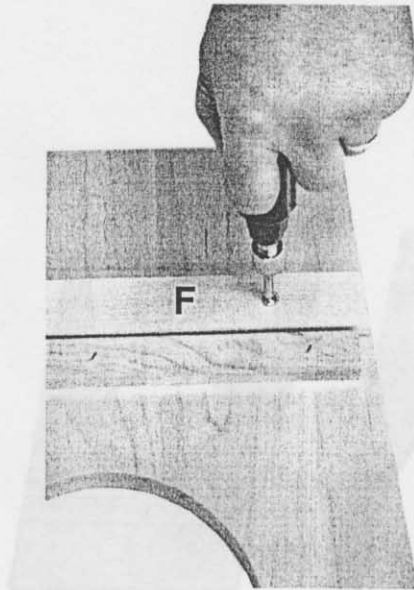

 Remove the board F on both legs, noting which side they came from, for re-installation later.

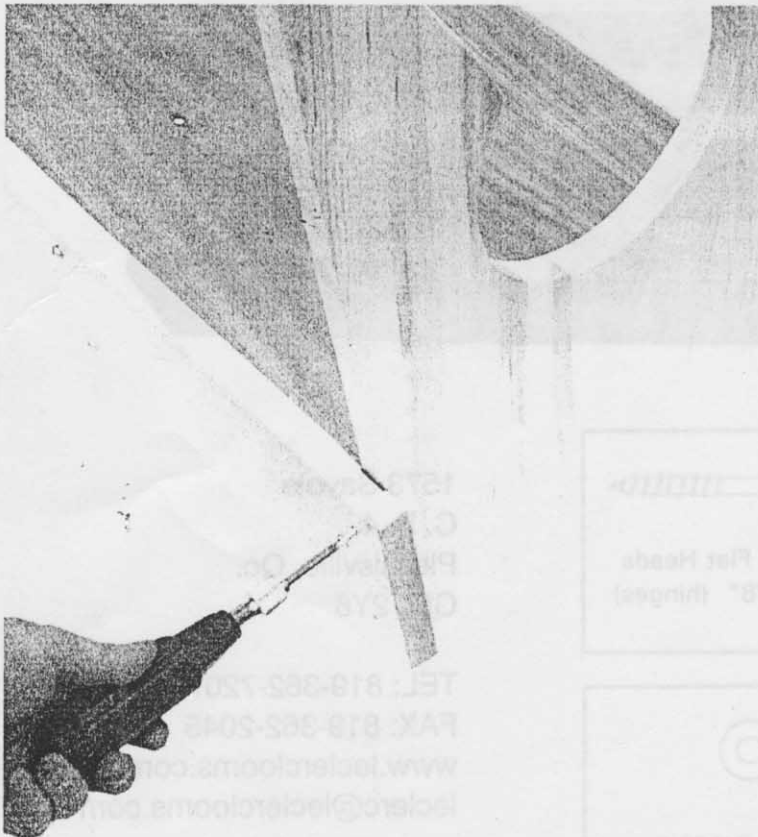


Place the bench frame upside down on a flat surface (large table or a level floor).

Slide legs into the grooves and screw them in using the 8 round headed No. 8 screws 1 1/4"


Do not tighten them until the bench is on its legs and straight.

 If the bench does not rock, complete screwing in all 4 screws while keeping all bench legs on the floor.

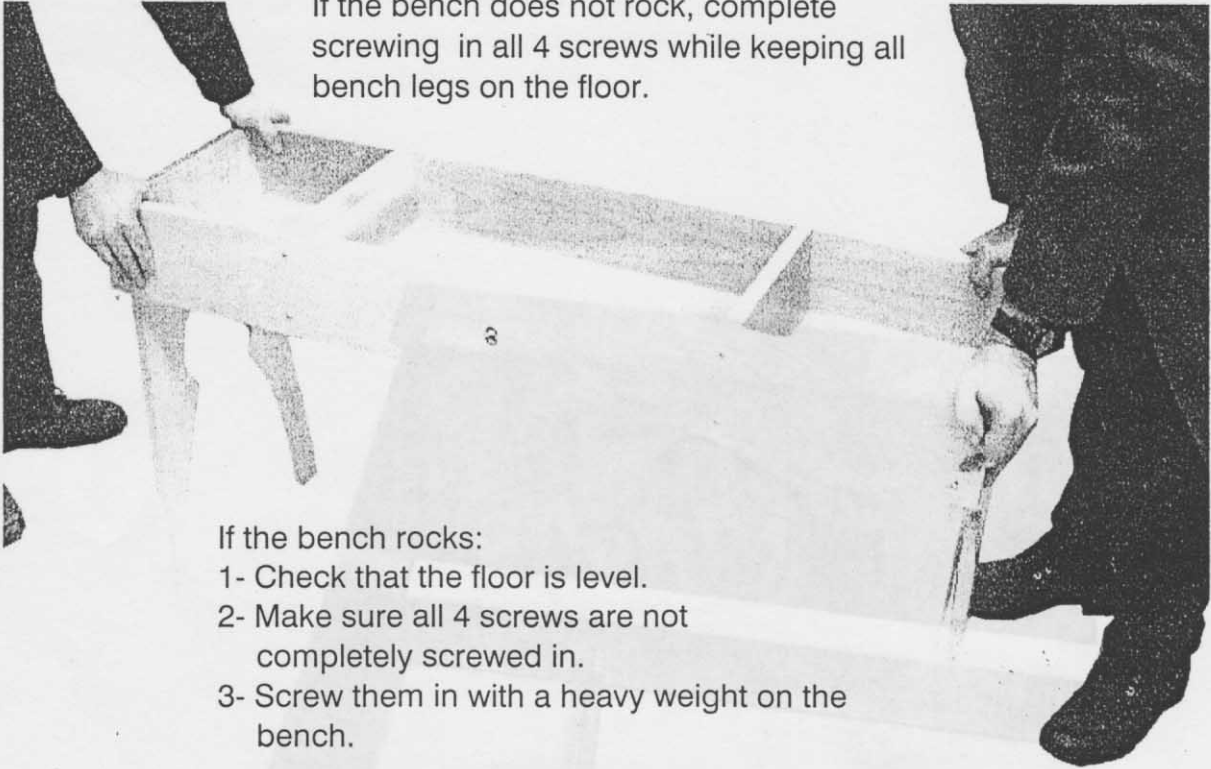


If the bench rocks:

 - 1- Check that the floor is level.
- 2- Make sure all 4 screws are not completely screwed in.
- 3- Screw them in with a heavy weight on the bench.

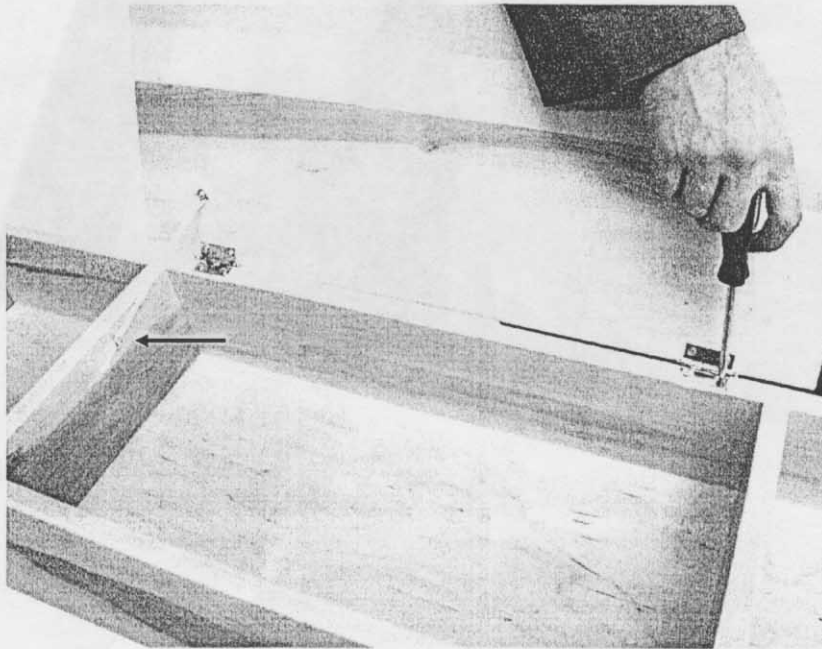

Install the Bench cover using the 4 flat head No. 6 screws 5/8".

 Fix the loop cord from the cover to the frame using one No. 6 screw , 5/8" and a washer 3/16".

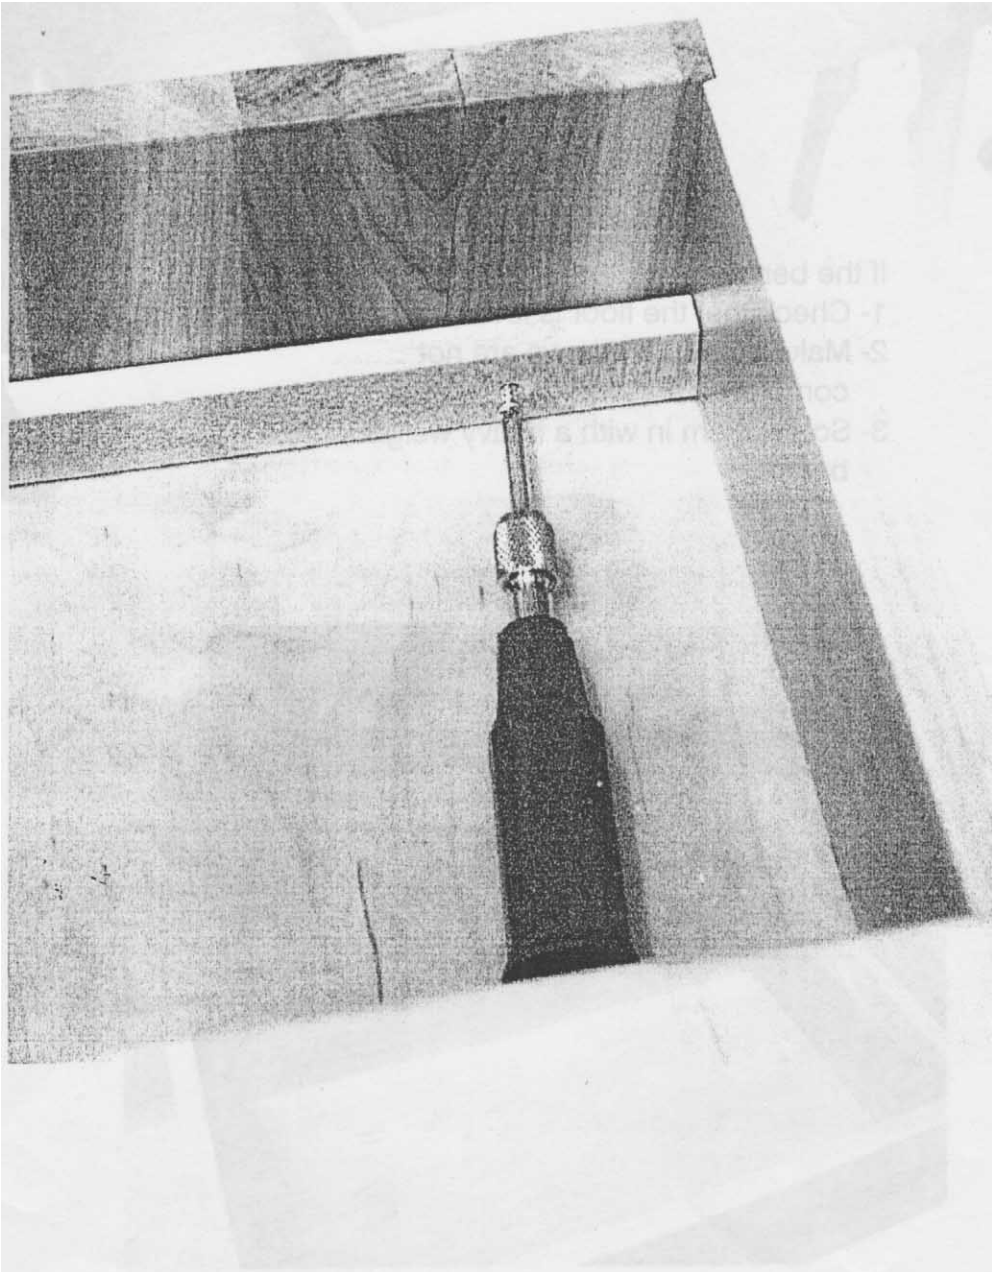

Complete the assembly by installing the leg boards using the same boards and screws that were removed earlier.