

**Métiers Leclerc
Leclerc Looms**





**TENSION BOX
6160-1000**


1573 Savoie C. P. 4 Plessisville, Qc. G6L 2Y6
TEL: 819-362-7207 FAX: 819-362-2045
www.leclerclooms.com

* Voir verso pour version française


Use the octagonal handle (P) to slide the bottom part (with the rubber pads) until it is a little wider than the width of the loom breastbeam.

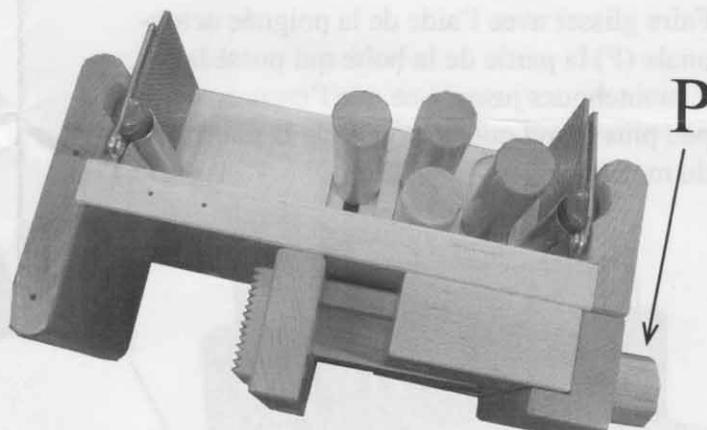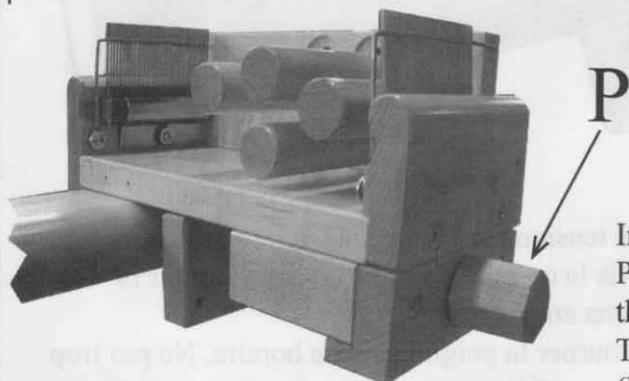

Install the tension box on the loom breastbeam. Place it over the desired section. Tighten it in place turning the handle (P) counter-clockwise. To move sideways, loosen it by turning the octagonal handle (P) clockwise.

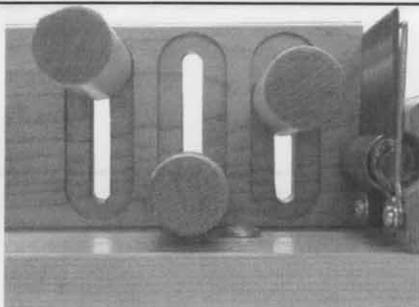

Install the tension box rollers and adjust them for the tension desired. Many configurations are possible.

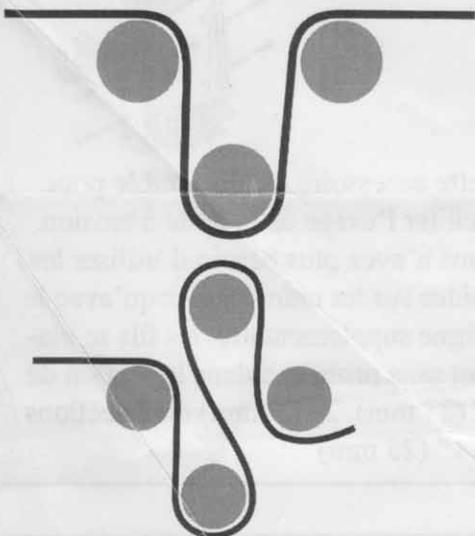


Standard installation with 3 tension rollers.

Special installation using 4 rollers for high tension.

EXTENSION WITH COMB

OPTION

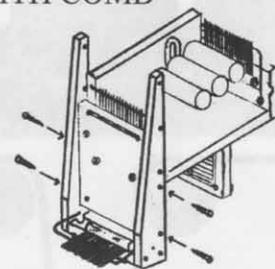

This accessory is available to facilitate the use of the tension box. You will no longer have to use the guides on the section dividers because the supplementary comb spreads the threads equally inside the section of 1"(25mm), 2"(50mm) or two sections of 1".

FOR SUPPLEMENTARY INFORMATION REGARDING THE TENSION BOX, SEE THE BOOK "WARP & WEAVE" BY ROBERT LECLERC, THIS BOOK IS SUPPLIED WITH ALL LECLERC LOOMS AND IS FREE ON OUR WEB SITE.

**Métiers Leclerc
Leclerc Looms**





**BOITE À TENSION
6160-1000**


1573 Savoie C. P. 4 Plessisville, Qc. G6L 2Y6
TEL: 819-362-2408 FAX: 819-362-2045
www.mleclerc.com

* For English version, see opposite side


Faire glisser avec l'aide de la poignée octogonale (P) la partie de la boîte qui possède les 2 caoutchoucs jusqu'à ce que l'espace soit un peu plus grand que la largeur de la poitrine du métier

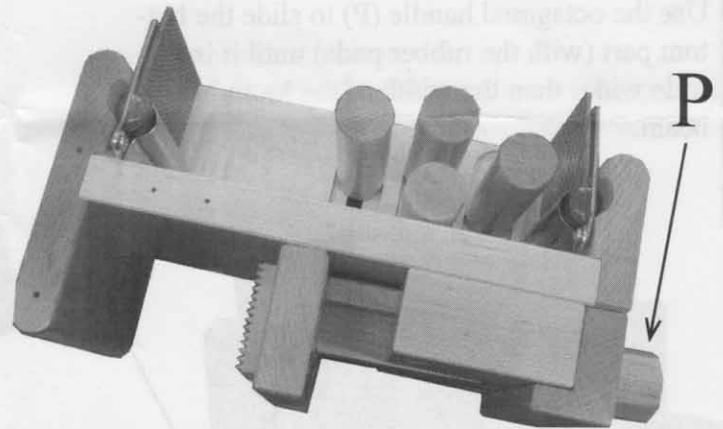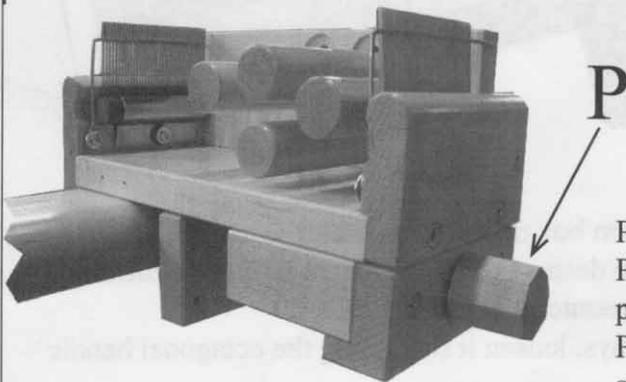

Placer la boîte à tension sur la poitrine.
Placer la vis à vis la crampe et serrer un peu (tourner la poigné (P) en sens anti-horaire)
Pour déplacer, tourner la poigné en sens horaire. Ne pas trop serrer.

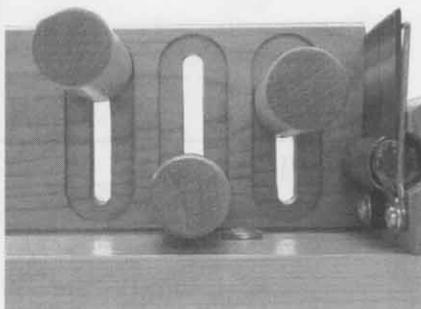

Mettre les rouleaux en place et les placer selon la tension voulue. Plusieurs configuration est possible.

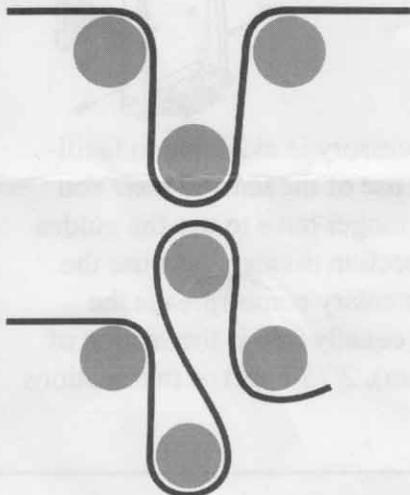


Montage standard avec 3 rouleaux pour une tension normale.

Montage spécial avec 4 rouleaux pour une tension supérieure.

RALLONGE AVEC PEIGNE

OPTION

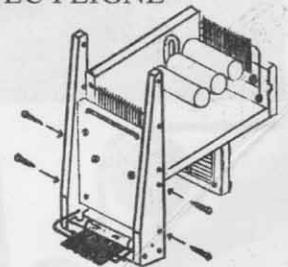

Cette accessoire est disponible pour faciliter l'usage de la boîte à tension. Vous n'avez plus besoin d'utiliser les guides sur les crampes puisqu'avec le peigne supplémentaire, les fils se placent sans problème dans la section de 1" (25 mm), 2" (50mm) ou 2 sections de 1" (25 mm)