


INSTRUCTIONS

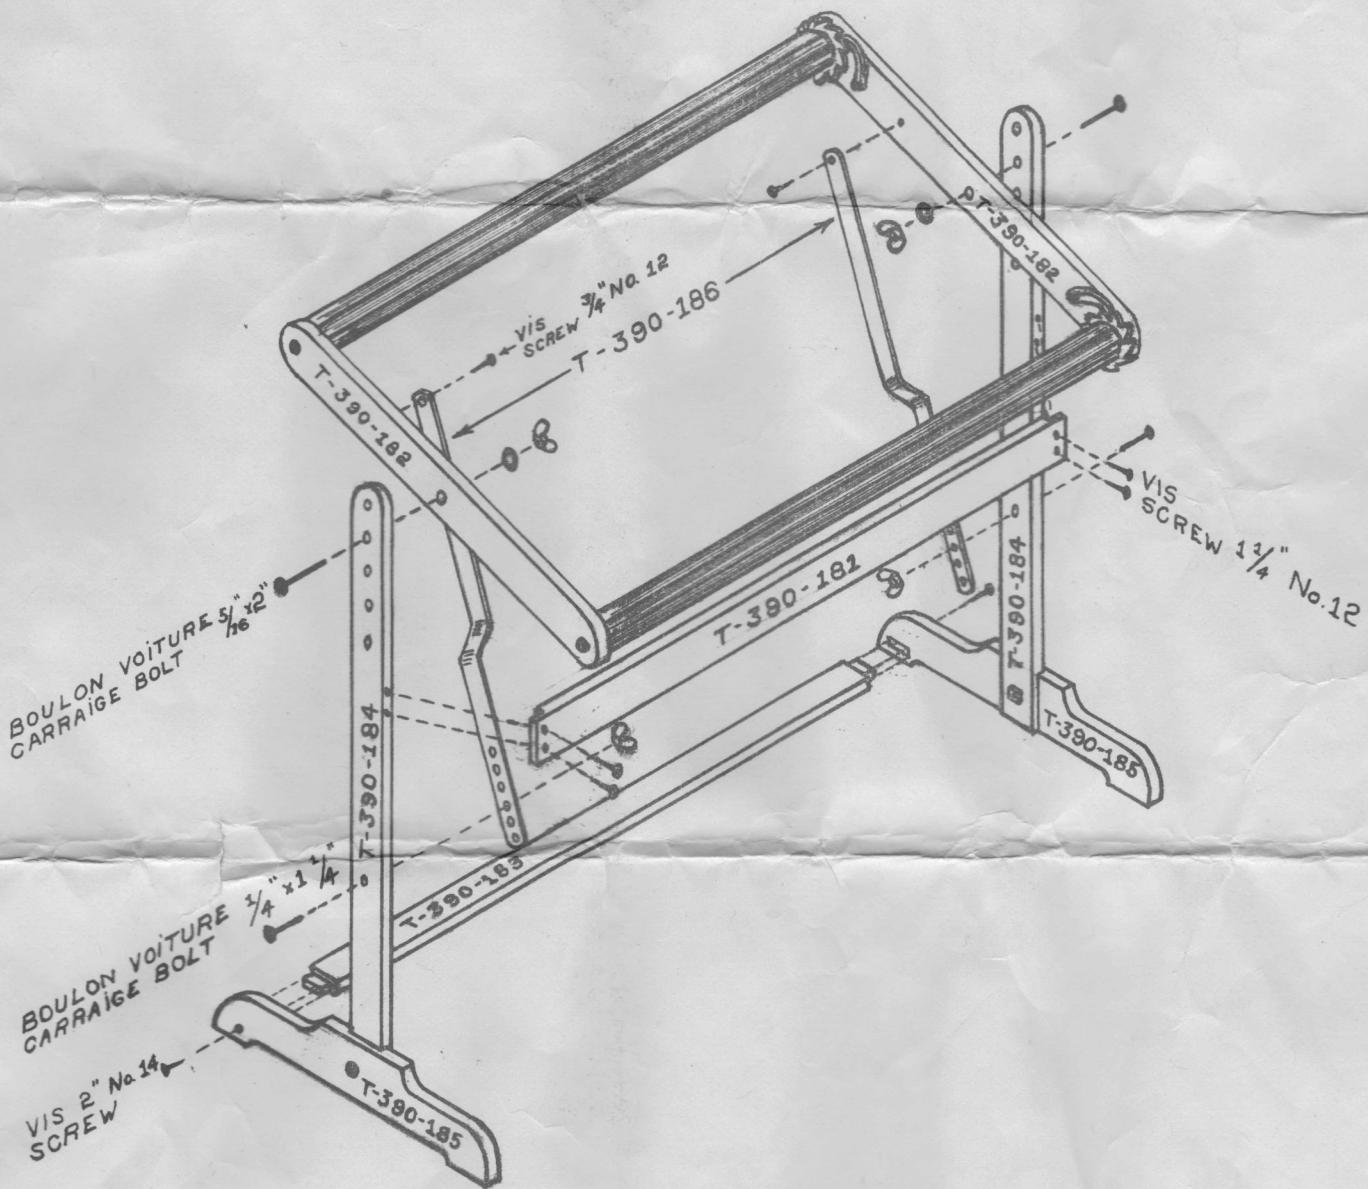

Fixez la traverse T-390-181 aux montants T-390-184 en utilisant les vis 1 $\frac{1}{4}$ x 12, ensuite fixez la traverse T-390-183 aux pattes T-390-185 en utilisant les vis 2 x 14.

Fixez le cadre en posant les boulons 5/16 x 2 dans un des trous des montants T-390-184 selon la hauteur désirée et serrer à l'aide de papillons.

Fixez les ferrures T-390-186 aux traverses T-390-182 avec les vis $\frac{3}{4}$ x 12 et ensuite aux montants T-390-184 à l'aide de boulons et papillons.

Le cadre peut être placé sous différents angles en ajustant les ferrures T-390-186.

Fix cross piece T-390-181 to the upright pieces T-390-184 with screws 1 $\frac{1}{4}$ x 12, then cross piece T-390-183 to the posts T-390-185 with screws 2 x 14.

Fix the frame with bolts in holes of upright pieces T-390-184 at the desired height and tighten with wing nuts.

Fix the hooks T-390-186 to the cross pieces T-390-182 with screws $\frac{3}{4}$ x 12, and then to the upright pieces T-390-184 with bolts and wing nuts.

The loom is adjustable at any angle, simply fix the bolts in one of the holes desired on hooks and tighten with the wing nuts.

