

GOBELIN KIT 2 SHAFT FRAME 45", 60"

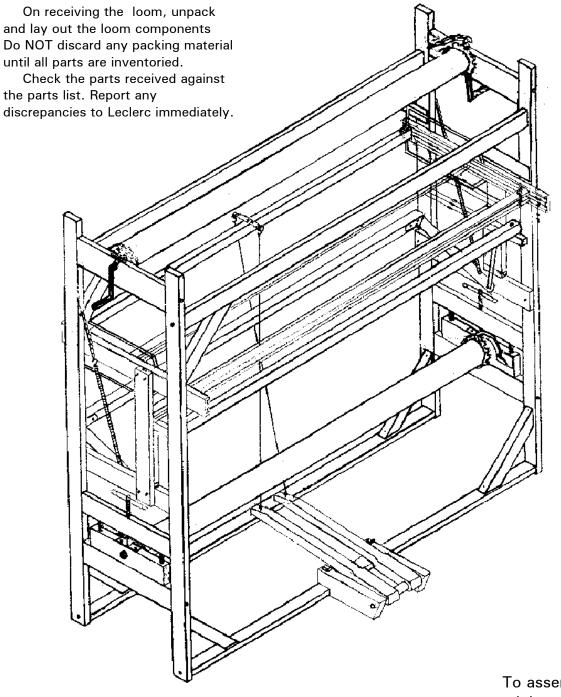

| Kit Prepared by: | |
|-------------------|--|
| Tatti repared by. | |
| Inspected by: | |
| Date: | |

To assemble this loom, a minimum of 2 people are needed but it is recommended you use 3.

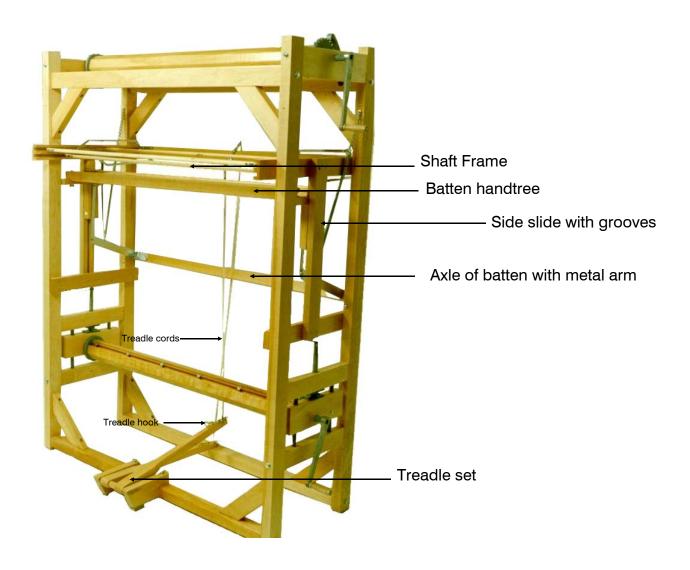

PARTS LIST "GOBELIN KIT 2 SHAFT



2X - 1/4" x 3" Back loom latch

4X - 5/16 x 23/4" Batten handtree (sley)

2X - 5/16" x 33/4" Treadle set






2X 5/16"


Wing nuts

2 X - 1/4" (back loom latch)

4X - 5/16"

Washers







12X #14 2"



Round head screw

2X #12, 1" (latch)

2X #12, 1" (axle to swords)

2X #12, 11/2" (chain)


2 x 5" chain for spring connection



2x Back Loom Latch



1 Reed 6 dents



2 Flat shuttles 10" or 14"



1 Thread hook



IF THE KIT IS NOT SHIPPED WITH A NEW LOOM:




1 Black no 3 screwdriver

1 instruction DVD Video showing all stages of installation.


3X 100 Wire Heddles (36" & 45") 4x 100 Wire Heddles (60" loom)


101/2"



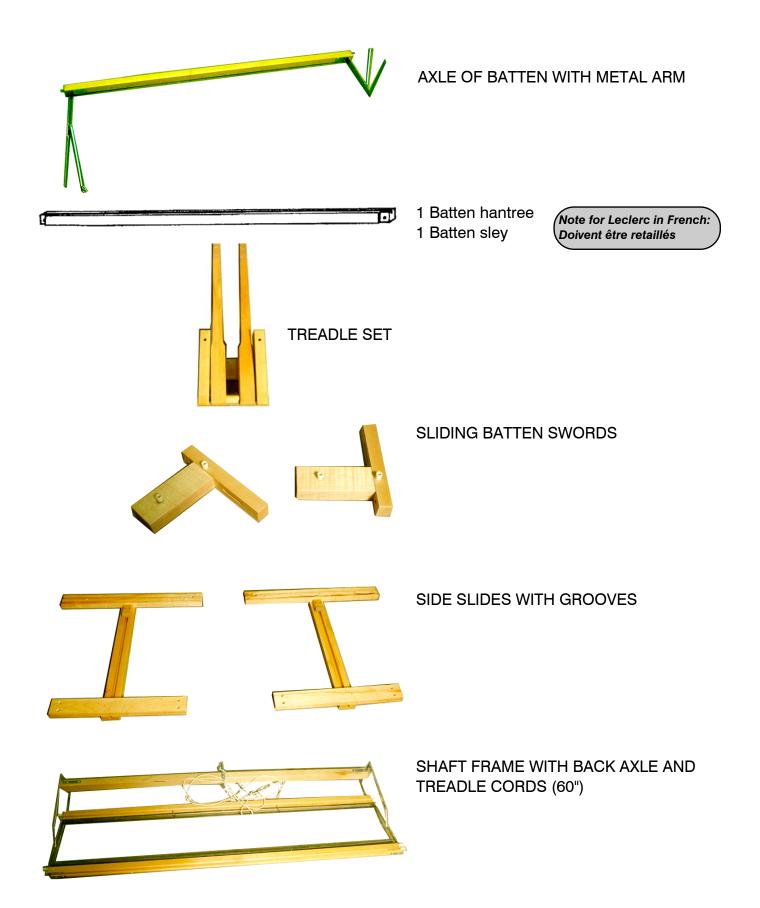


Most recent looms have pre-drilled holes to make installation easier. For older looms, see drawing on page 11 to make them.

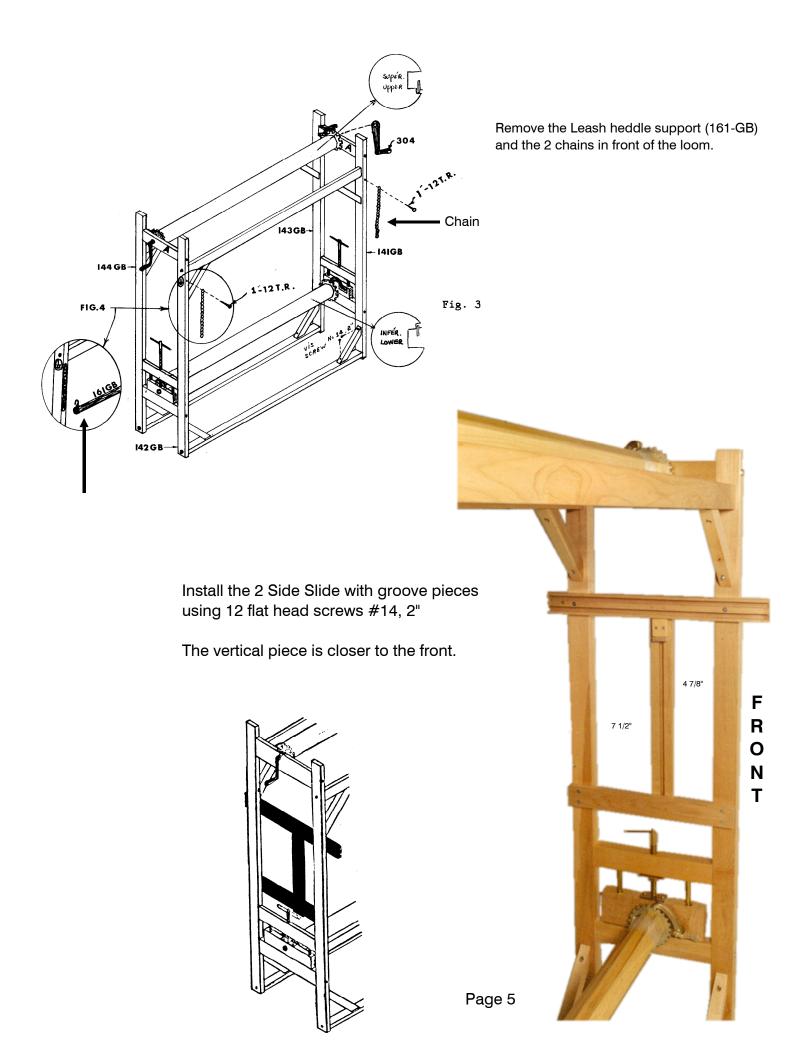

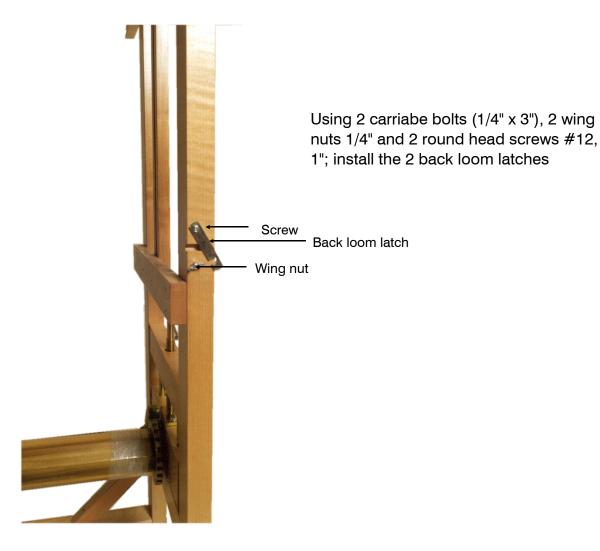




Place the "Axle of batten with metal arm" (6) in the slot of the back loom. Close and lock latches

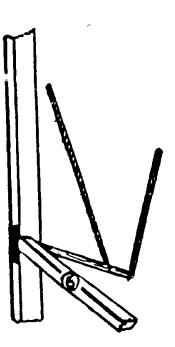


Page 6

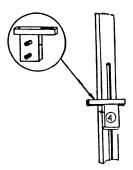


Place Sliding Batten Swords to the Side Slides by inserting the nylon pins in the grooves of front upright pieces, short end toward the rear.



Using two 1" round head screws #12, fix the metal arms of the axle to the sliding batten swords.

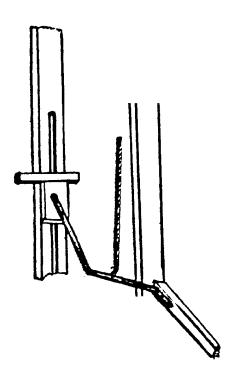

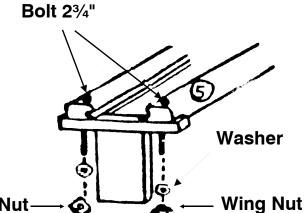




Put the batten handtree and batten sley on sliding batten swords.

Insert the carriage bolts at the end of the batten handtree and sley. Push the bolts with a hammer untill the round head rest on wood. The square part must enter into the wood.

Screw batten handtree firmly, using nuts. Place washer before the nut. Fix batten sley with steel washer and wing nut. Hand screw only.

To change the reed, loosen wing nuts and slide the batten sley.

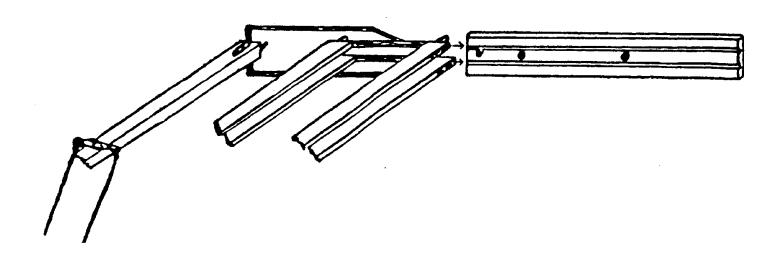




PLACE HEDDLES IN SHAFT FRAMES. See book "Warp & Weave"

Slide Shaft frames in the grooves of the Side Slides until the pins of the back piece fall in the slot of Side Slides.

Using 2 round head screws #12, 11/2" install the 2 chains to the frame at the pre-drilled holes.


Connect the springs and chains. Adjust it so the beater stays in the up position by itself.

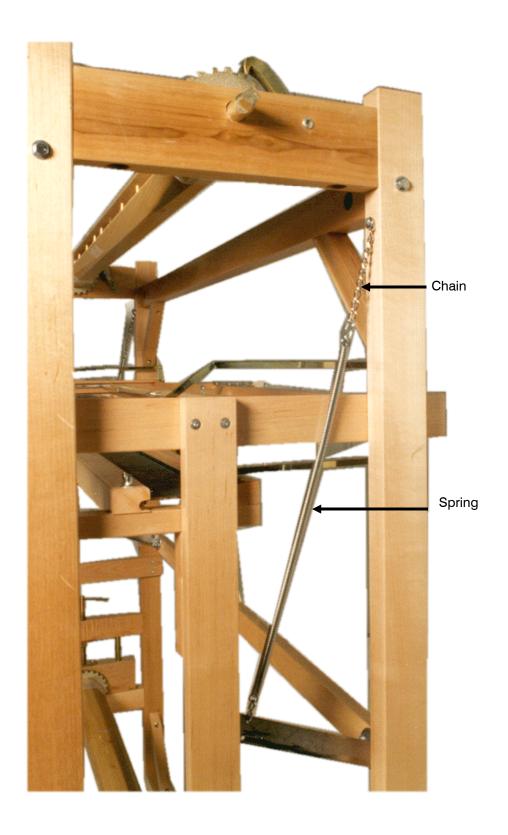



Using 2 Carriage bolts 5/16" x $3\frac{3}{4}$ " (to be inserted from the bottom of the cross member), 2 washers and 2 wing nuts, affix the treadle set to the loom.

Connect treadle to cord of axle so you will have a normal shed when each treadle is pushed down.

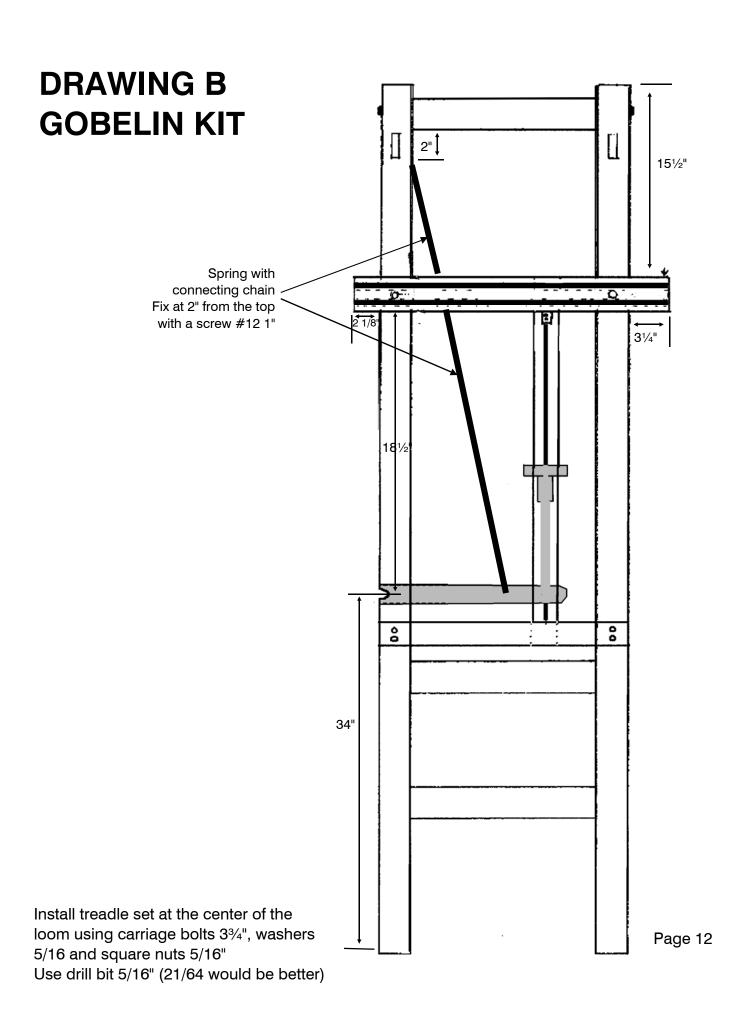

For more information on how to make the warp or how to weave a tapestry, refer to the 2 books supplied with the loom.

We at Leclerc encourage Weaver feedback on this and all our products. Please send your comments to Leclerc Loom Co.



1573 Savoie C. P. 4 Plessisville, Qc. G6L 2Y6

TEL: 819-362-7207 FAX: 819-362-2045 info@leclerclooms.com www.leclerclooms.com