

Leclerc Looms

Since 1876



1573 Savoie
C. P. 4 Plessisville, Qc. G6L 2Y6
TEL: 819-362-7207
FAX: 819-362-2045
www.leclerclooms.com
leclerc@leclerclooms.com

SPECIAL WHEELS KIT FOR THE COMPACT LOOM

THE KIT INCLUDE:


- 2 wood blocs with wheels
- 2 carriage bolts $2\frac{3}{4}$ " x $\frac{1}{4}$ "
- 2 Washers $\frac{1}{4}$ "
- 2 wing nuts $\frac{1}{4}$ "
- 2 screws #8 2"




INSTRUCTION:

As you can see the blocs sit on the back cross member and screw to it with 2 screws #8, 2".
Use a drill $\frac{1}{8}$ " to make the pre-drill holes.

Use a drill $\frac{1}{4}$ " to make the pre-drill hole for the carriage bolts.
The wing nuts goes inside the loom.

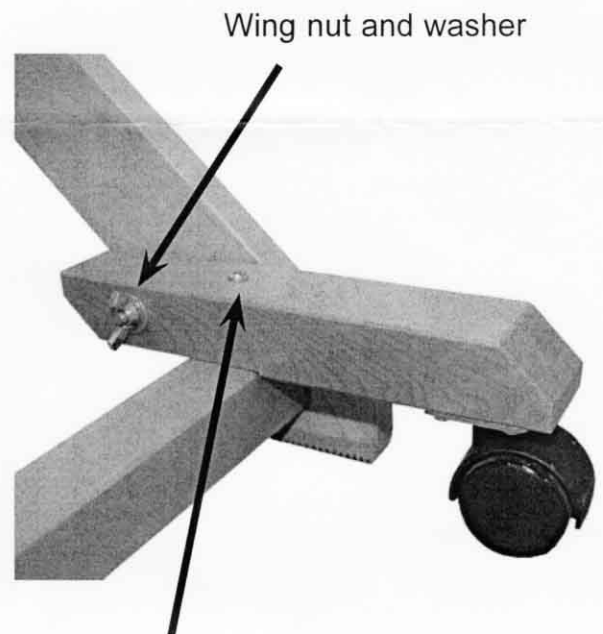

Wing nut and washer

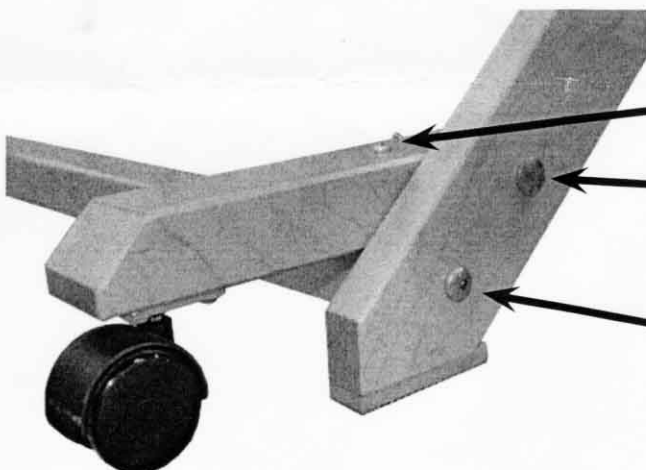

Round head screw #8 - 2"

Carriage bolt $\frac{1}{4}$ " x 3"

Screw that hold the cross-member already in the loom