

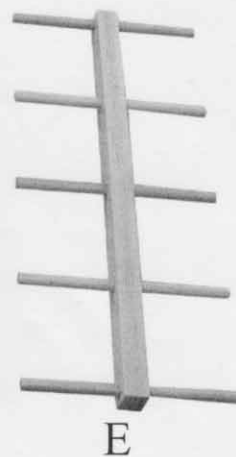
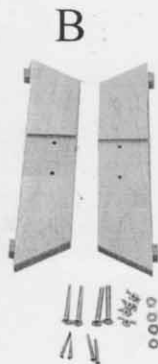


**Métiers Leclerc  
Leclerc Looms**

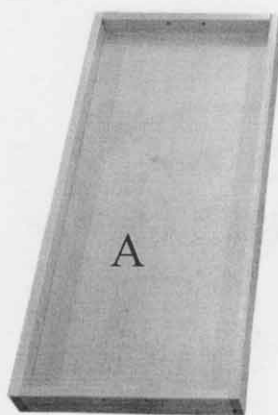


**Support de Ros  
Reed Stand  
6380-1000**

1573 Savoie C. P. 4 Plessisville, Qc. G6L 2Y6  
TEL: 819-362-7207 FAX: 819-362-2045  
www.leclerclooms.com

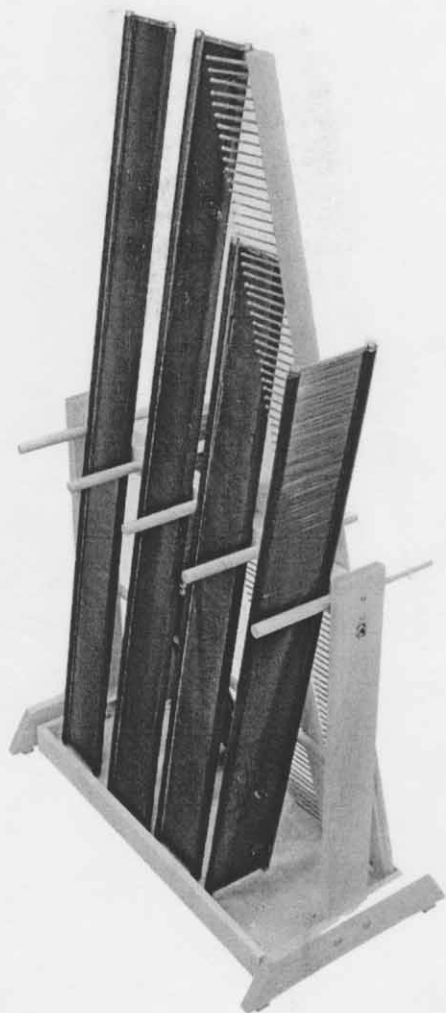

- A) Base
- B) 2x Supports
- C) Dougon centre
- D) 2 montants
- E) Traverse du haut
- 4x Boulons voiture 2¼" x ¼"
- 4x Écrous papillon ¼"
- 4X Rondelles ¼"
- 4 vis tête ronde #8, 1½"

- A) Bottom base
- B) 2x Supports
- C) Centre dowel
- D) 2 Uprights
- E) Upper crossmembers
- 4x Carriage bolts 2¼" x ¼"
- 4x Wing nuts ¼"
- 4X Washers ¼"
- 4 Round headed screws #8, 1½"

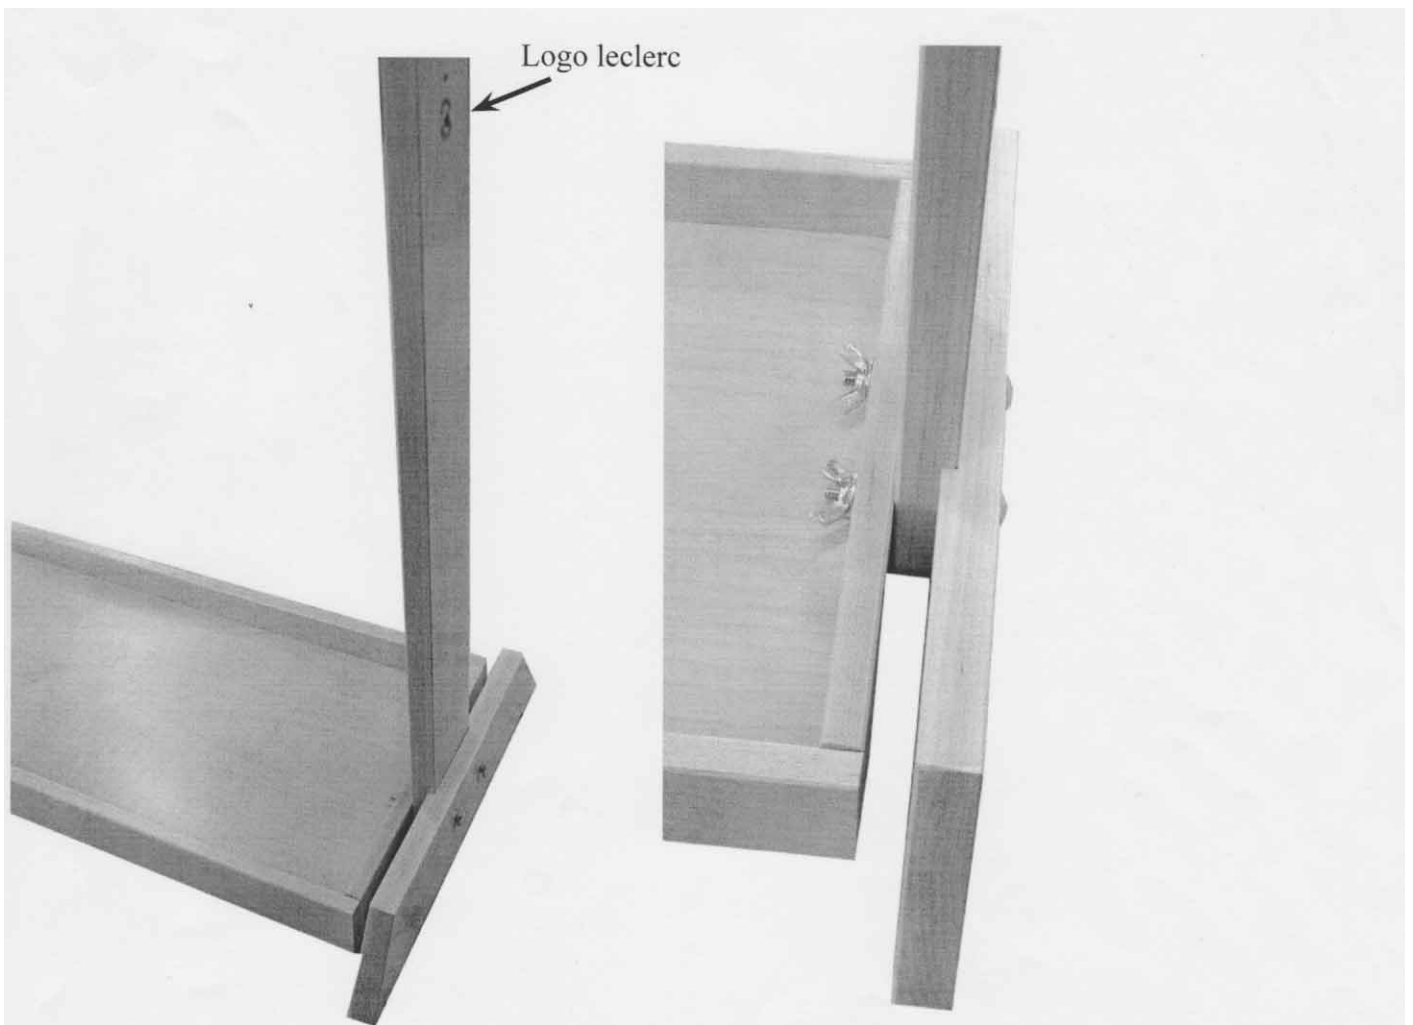


Asembler la base au supports et montants avec les boulons machine  $\frac{1}{4}$ " , les rondelles  $\frac{1}{4}$ " et les écrous papillons  $\frac{1}{4}$ ".  
Placer les logos Leclerc des montants à l'extérieur.

Frapper les têtes ds boulons machine pour les insérés au support pendant que vous vissez les écrous papillons.

*Affix the bottom base to the supports and the uprights using the carriage bolts  $\frac{1}{4}$ " , the washers  $\frac{1}{4}$ " and the wing nuts  $\frac{1}{4}$ "*

*Place the Leclerc Logo on the outside.*

Hammer these carriage bolts into the hole so it will lock while you will screw in the wing nuts.

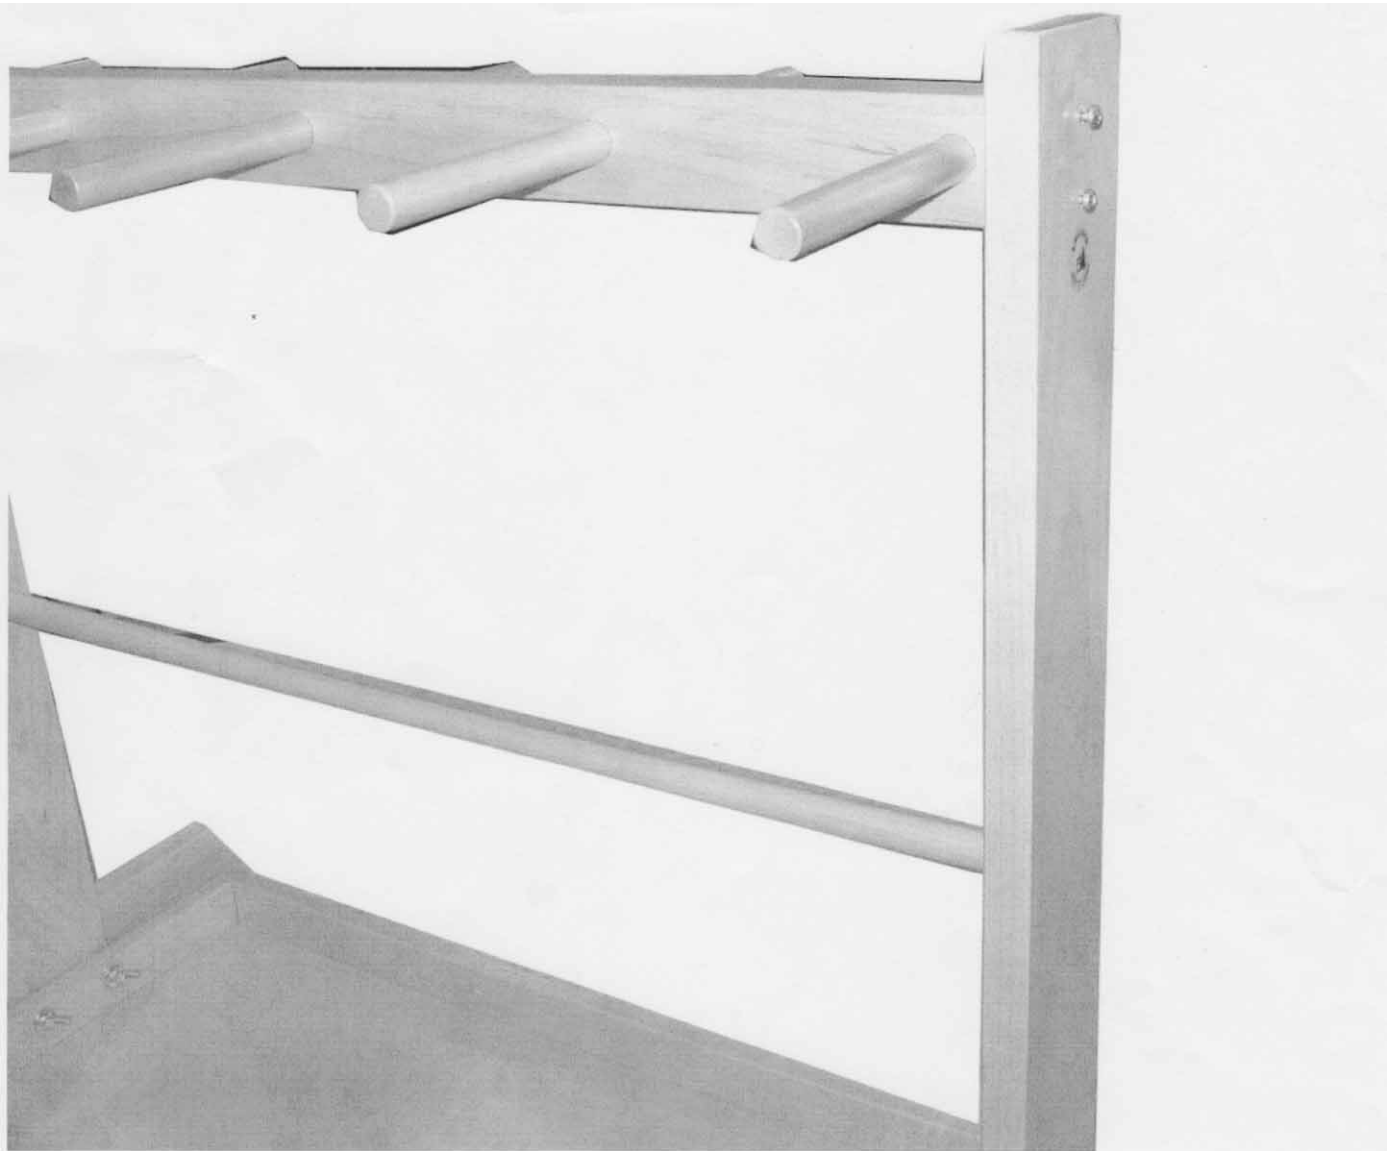

Compléter l'assemblage en insérant entre les montants le goujon du centre (dans les trous) et la traverse du haut (côté dans trous sur le dessus) en utilisant les 4 vis tête ronde #8, 1½"

*Complete the installation with the middle dowel (in the upright holes) and the upper cross member (clear of little holes to the top) with the 4 screws #8, 1½"*